




WWW.WYLIEWARBIRDS.COM

THE FRITZ SERVO TRAY ASSEMBLY INSTRUCTIONS.


1. GATHER THE NEEDED THINGS FOR ASSEMBLY

A. MEDIUM CA OR GLUE OF YOUR CHOICE


2. LAY OUT YOUR SERVO TRAY PARTS

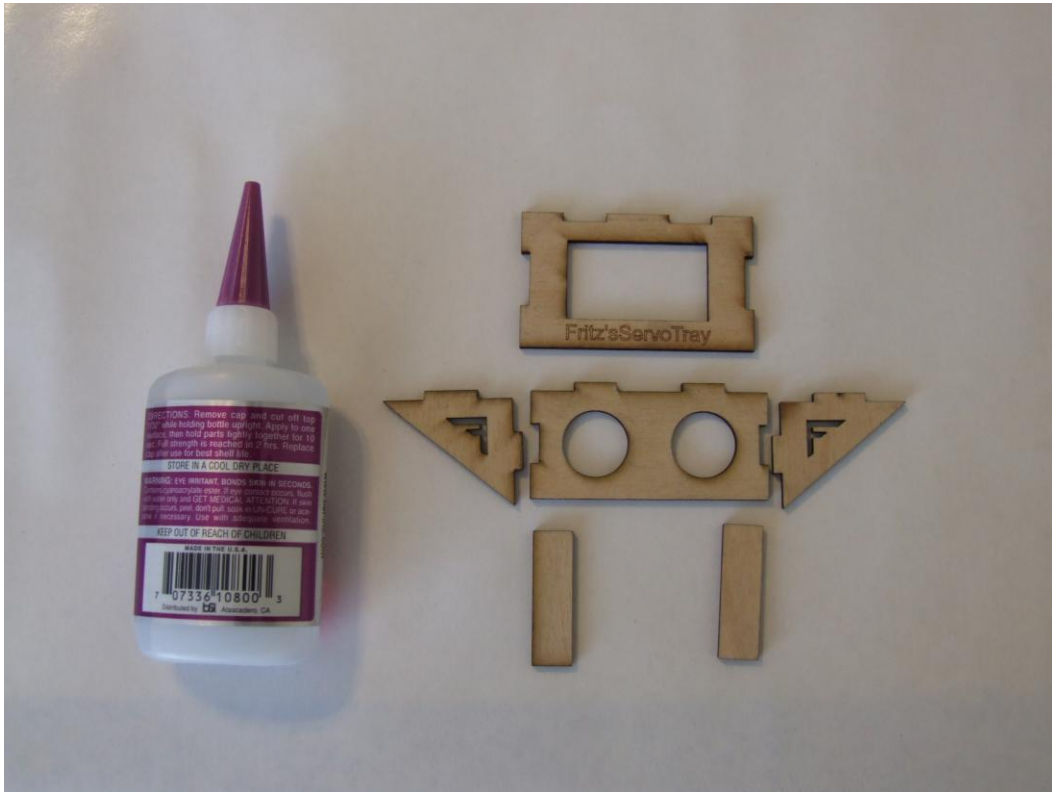

3. GLUE THE TOP AND BACK SIDE OF THE SERVO TRAY TO GETHER.

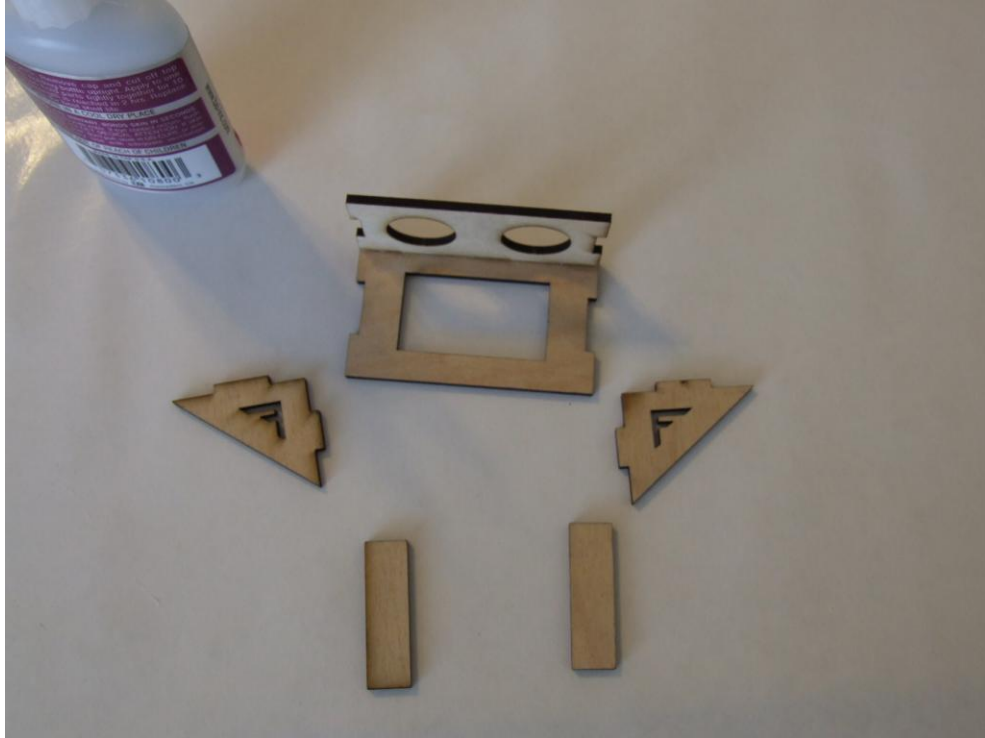

4. GLUE THE SIDE OF THE SERVO TRAY TO THE BACK AND TOP.

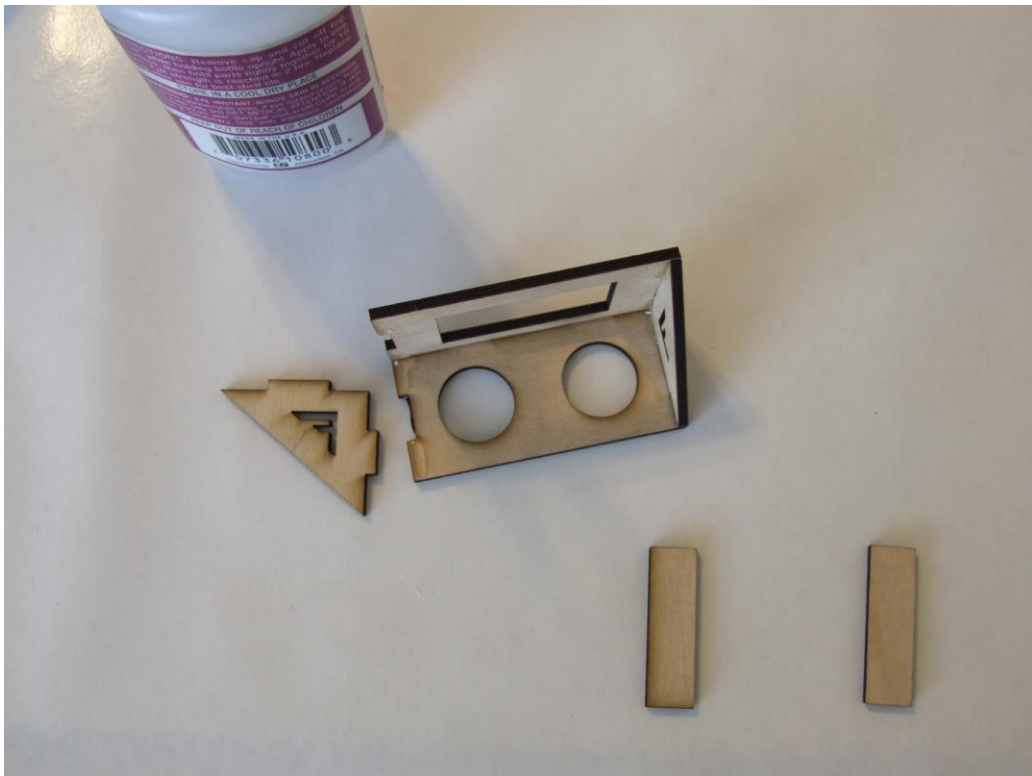

5. GLUE THE SCREW TREADS TO THE BOTTOM SIDE OF THE SERVO TRAY.





